

BC8DP Firmware Upgrade Instructions

You need following items before starting the firmware upgrade job.

- Input power source; AC or 12V DC
- USB cable set to link charger to PC, which comes with charger
- PC which already has USB driver file working properly



1. Download 'BC8DP V1-5.zip' to local storage of your PC from our web page - 'Support'.

2. Extract the file to a new folder.

3. Link USB cable between charger and PC. DO NOT power up the charger yet.

4. Execute 'bantam(bc8dp).exe', then press 'File Select' to find the '.hex' file at extracted folder.

5. Press 'Upgrade Start' to send the data to charger from PC. The upgrade program will search for the charger.

6. Now, power up the charger with pressing and holding   buttons together.








*** The charger screen will not be displayed until the job is finished successfully.**

7. The program will start to send data to charger. Now you can release the pressed buttons. The upgrade job will take few minutes to finish.

8. When the job is finished, the charger screen will be displayed with showing new version number.

9. Close the program and finish the upgrade job.

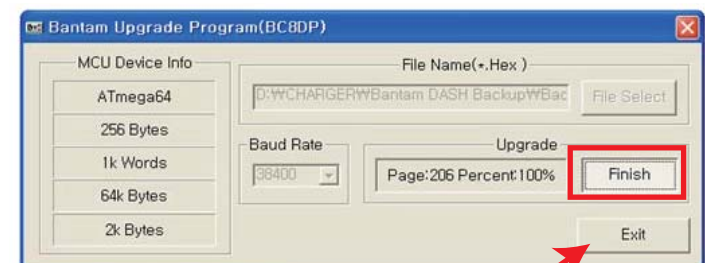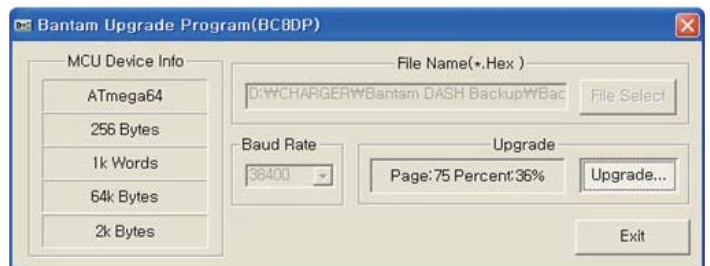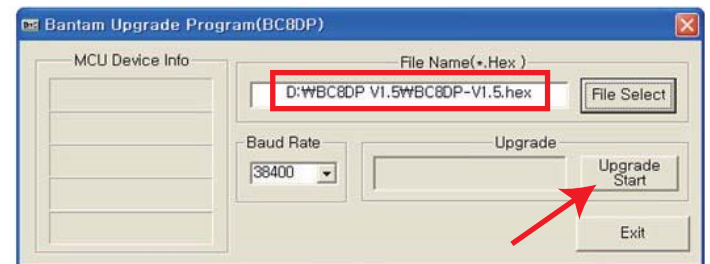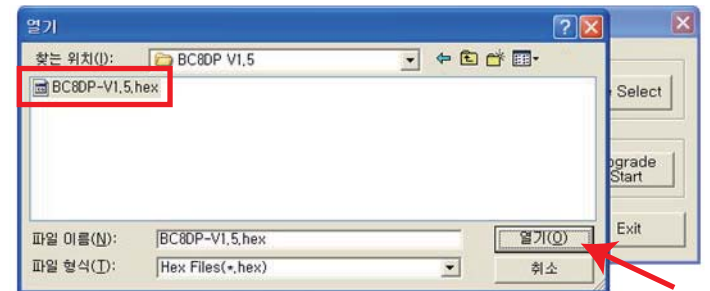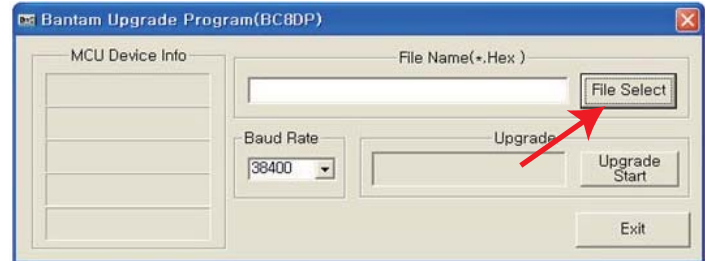

! The upgrade job should be done thoroughly without abort. If the upgrade job is failed, the charger will not work. If the job is not finished properly by any reason, do the job again from the start.