



1.0 DEVO RX703A connector illustration

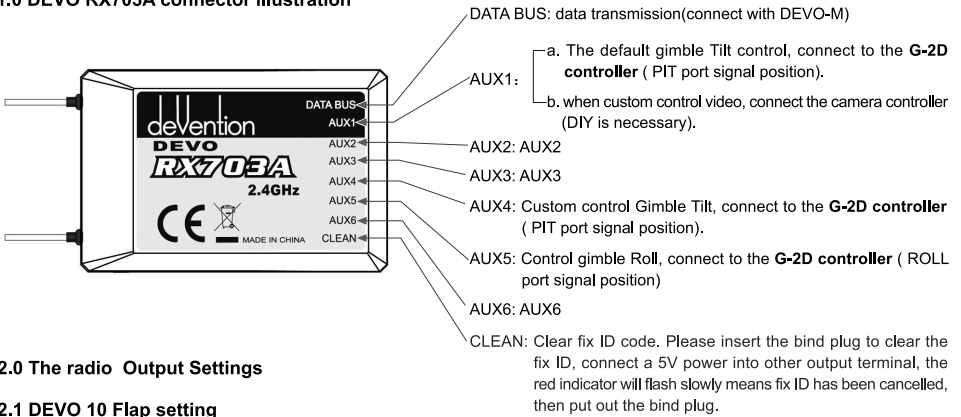

2.0 The radio Output Settings


2.1 DEVO 10 Flap setting

Press ENT to Main menu, press UP or DN to select Model menu, press ENT to enter Model menu. Press UP or DN to select Device Output in Model Menu, Press ENT to enter Device Output setting interface. Press UP or DN to select "Flap" settings: **(1) Press R or L to choose "AUX4 KB" to the default gimble Tilt control; (2) Press R or L to select "GEAR SW" to the custom video control.** After the selected, Press UP or DN to select Function setting, Press R or L to choose Active. After finish setting, press ENT to confirm and EXT to back to Main Menu.

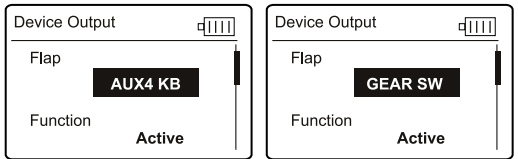


2.2 DEVO F7 Flap setting

Press ENT to the main menu, press UP or DN to move the cursor→to point to Model Menu, Press ENT to enter Model Menu. In the Model Menu, press UP or DN to move the cursor→to point to Device Output, press ENT to enter Device Output setting interface. Press UP or DN to move the cursor→to point to Flap and enter function setting display, press R or L to choose Active, then press UP or DN to move the cursor→to point to Flap switch selection: **(1) Press R or L to choose "AUX2 KB" to the default gimble Tilt control; (2) Press R or L to select "GEAR SW" to the custom video control.** After finish setting, press ENT to confirm and EXT to back to Main Menu.

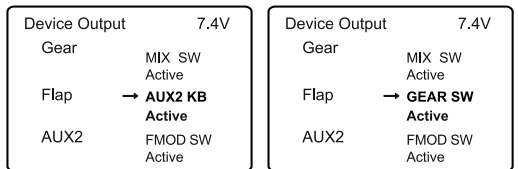

2.3 DEVO 7 Flap setting

Press the ENT to enter the Main Menu, press UP or DN until MODEL starts to flash, then press ENT button to enter the Model Menu. Press UP or DN under the MODEL menu, it comes out the flashing "OUTPTU" menu, press ENT to the submenu of Output: **(1) Press DN and R or L to choose "AUX2" to the default gimble Tilt control; (2) Press DN and R or L to choose "GEAR" to the custom video control.** Press DN and R or L to choose "FLAP ACT", After finish setting, press ENT to confirm and EXT to back to Main Menu.

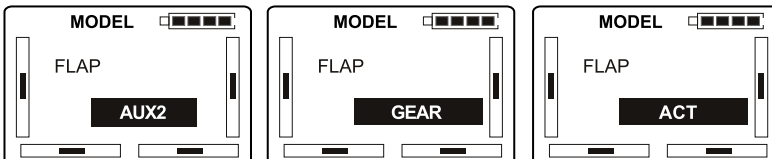

Warm Tips:
Other radio Output settings refer to QR X350PRO manual.